

Anti-freeze settings for pump only set ups:

Important Instructions for use during winter months (when air temps are below 5 degrees)

To prevent your pump and pipes from freezing during periods of low temperatures, the pump must be left powered on and running 24/7. If the pump is not turned on then it must be disconnected from the tank, fully drained of water, cleaned and placed under cover for the duration of the low temperature spells to prevent permanent damage to the parts.

DAMAGE DUE TO FREEZING IS NOT COVERED UNDER THE TERMS OF THE WARRANTY

Important Instructions for use during winter months (when air temps are below 2 degrees)

At these temperatures we advise that your pump must be disconnected from the tank, fully drained of water, cleaned and placed under cover for the duration of the low temperature spells to prevent risk of permanent damage to the parts.

DAMAGE DUE TO FREEZING IS NOT COVERED UNDER THE TERMS OF THE WARRANTY